

installation guidelines for standard stands 3a/3b/3c / 4

Supplied stands & accessories:

- Didgeridoo-stands
- 2 screws plus plastic dowels per stand

Important!

The laminations with soft PVC on the bearing surface is to protect your didgeridoo and avoid scratches, please don't remove them.

Additional tools needed for installation:

- Drilling machine
- Hammer (preferably a rubber hammer)

Liability:

konstruktiv – objekte aus metall cannot be held liable for any injury caused in the process of installation or as a result of installation. These installation guidelines are meant for experienced artisans only. If you need help installing the stands ask for local professional assistance or hire konstruktiv – objekte aus metall to install your standard stands.

The published terms and conditions on the website of konstruktiv – objekte aus metall apply.

Recommended procedure to fix your didgeridoo-stand on the wall:

1. Position the first standard stand (e.g. standard stand 3a) at the desired height on the wall (best using your didgeridoo).
2. Mark the lower hole of the first standard stand on the wall and remove the stand.
3. Brick wall:
Drill a hole of approx. 5 cm depth into the wall using a drill piece for brick walls (5 mm) for the lower hole.

Wooden wall:

Drill an approx. 2 cm deep hole with a wood or metal drill piece (2,5 - 3 mm). NB. Screws can be screwed into soft wood directly without pre-drilling. Do this so long only for the lower hole.

4. Brick wall:
Fit a plastic dowel to a screw. Hold the standard stand to the drilled hole and sink the screw with the dowel in the hole until the dowel is ca. 1 cm deep in the wall. Fasten the screw well.

Wooden wall:

Hold the standard stand to the drilled hole. Screw the screw without the dowel into the lower hole. Fasten well.


5. Now hold the Didgeridoo against the half-installed standard stand and position both as desired. (Hint: For a better visualisation and result, the second stand can be positioned and marked.) Fix the half- installed stand at this position and remove the didgeridoo.
6. Brick wall:
Finish the first standard stand: Drill the upper hole of the first standard stand using a stone drill (5 mm). (Hint: Before drilling the second hole, loosen the first (lower) screw a bit and shift the stand to the side for easier drilling.) Fix the standard stand tightly against the wall by fastening the upper and lower screws (compare step 4).

Wooden wall:

Drill the upper hole of the standard stand using a wood or a metal drill (2,5 - 3 mm). (Hint: Before drilling the second hole, loosen the first (lower) screw a bit and shift the stand to the side for easier drilling.) Fix the standard stand tightly against the wall by screwing the upper screw and fastening the lower screw. Screw can be screwed directly into soft wood without pre-drilling.

7. The first part of the installation is finished now. Install a second (and further) standard stand likewise in accordance with steps 1 to 6.

Schematic representation:

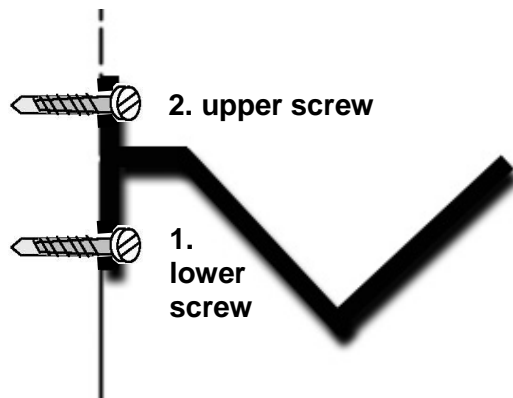

Enjoy your new didgeridoo-stand.

oliver karrer-luescher
konstruktiv – objekte aus metall
halbartenstr. 75c
ch-5430 wettingen
mobile +41 78 818 57 62
info@konstruktiv.li
www.konstruktiv.li

If you have any questions please contact me directly by e-mail.